

 


# Stuck Shutter Fix Replacement


A stuck shutter is a common failure mode for digital cameras. The camera may take black pictures (for shutter stuck closed), or the pictures may be bright and overexposed, especially when taken (for shutter stuck open).

Written By: Marina Bayardo




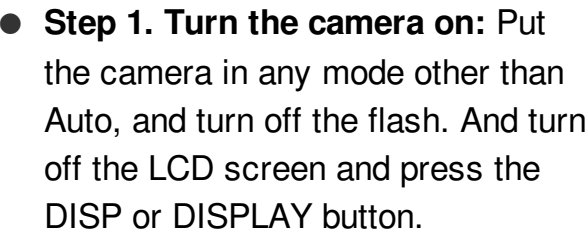

## Step 2

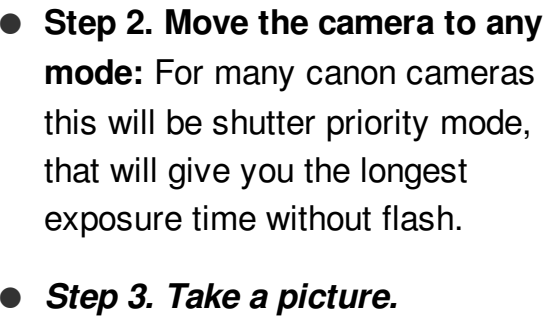 

## Step 3

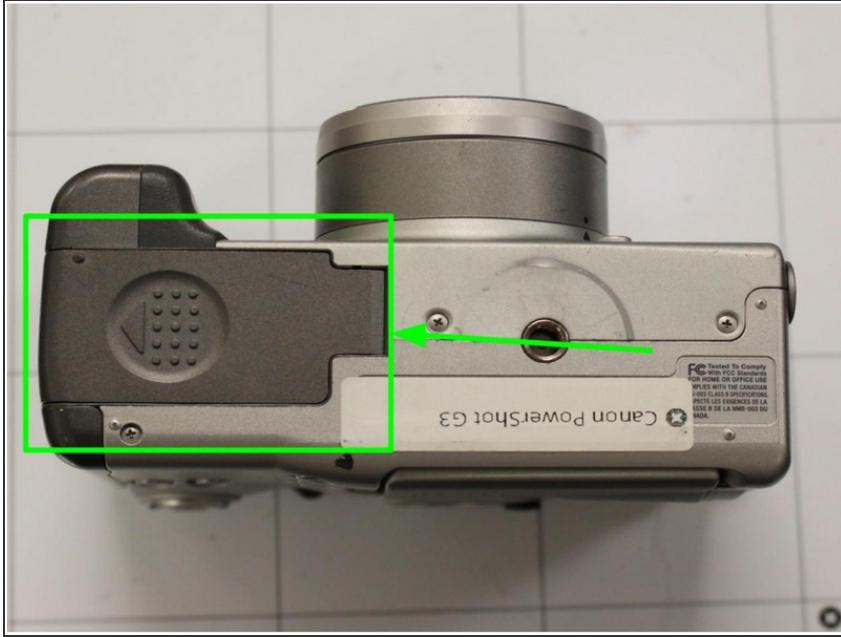 

- **Step 4. Open battery door:** After a few seconds open the battery door and then close it again. This will momentarily interrupt power during the exposure time.
- **Step 5. Repeat:** Repeat procedure until the shutter becomes unstuck.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 08:07:52 AM.